


Pinout for LogicCell

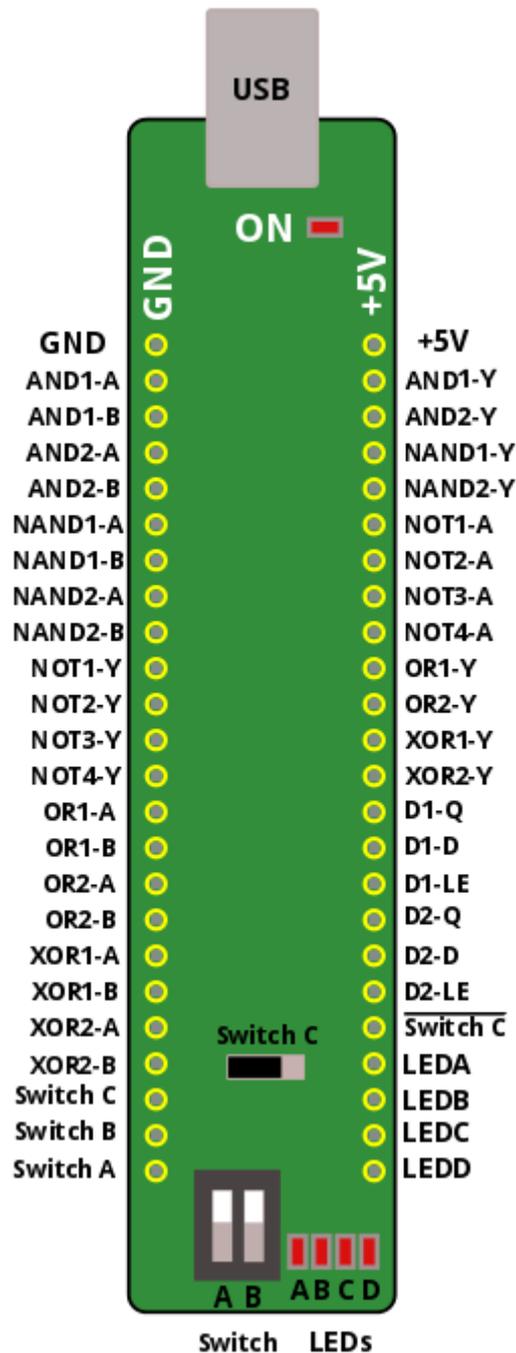

NOTES

1. +5V pin to be used to power small extra circuits
2. Only connect Alternate Power Supply to +5V pin when USB cable **NOT** connected
3. Alternate Power Supply must be with 3 to 6V and GND (0V connected to GND as well)
4. When powering external circuits make sure that LogicCell and extra circuit do **NOT** exceed current available from USB or Alternate Power Sources.